

Installation Instructions

50" Mulch Kit

Mfg. No. 1694958

For Regent II / 500 / 2500 / LT-200 Series Lawn Tractors

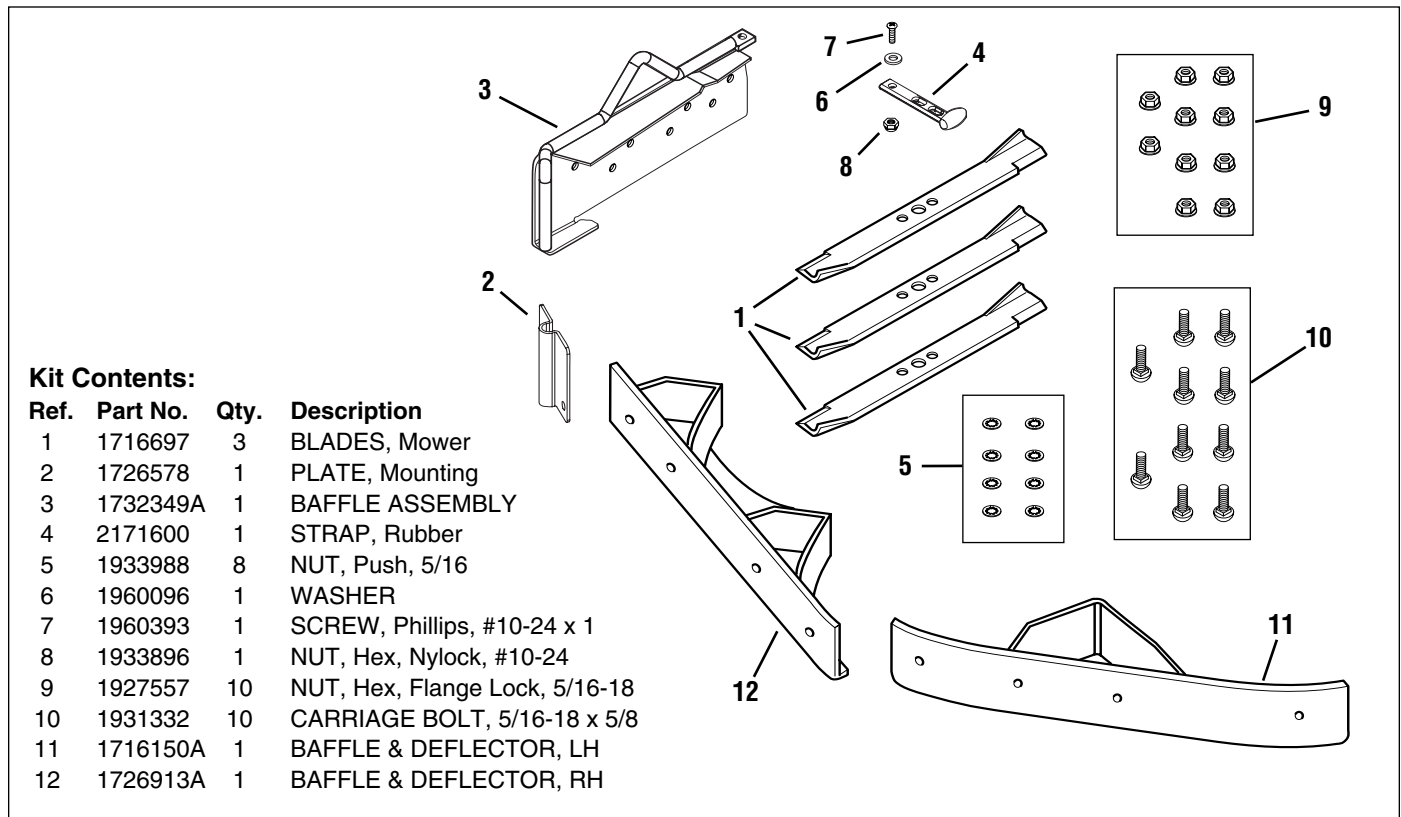


Figure 1. Contents



WARNING

Before beginning any service work turn off the PTO, set the parking brake, turn off the ignition, remove the key, and disconnect the spark plug wire(s).

INSTALLATION

1. Remove the mower deck. Refer to Operator's Manual (see Mower Deck Removal & Installation).
2. See Figure 2. Remove the blades. Use a block of wood to prevent blade rotation while loosening the capscrew by turning it counterclockwise.

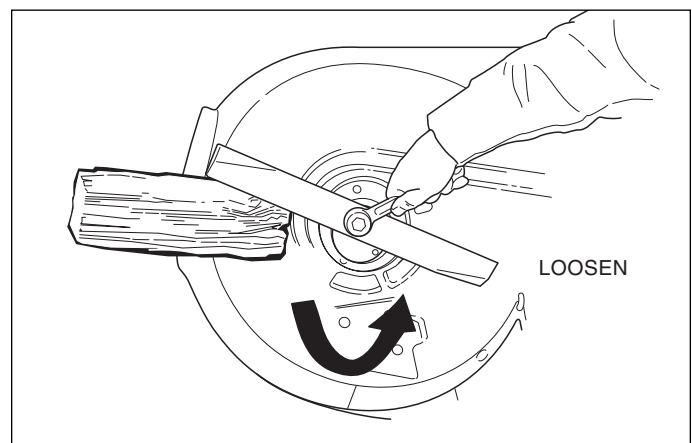


Figure 2. Blade Removal

3. Remove the capscrew (D, Figure 3), spring washer (C), hex washer (B), and blade (E).
4. Reinstall the new blade with the lift wings (E, Figure 3) pointing up toward the mower deck as shown.
5. Reinstall the hex washer (B, Figure 3), spring washer (C) and capscrew (D). Use a wooden block (A) to prevent blade rotation while tightening the capscrew (D) to 45-55 ft. lbs. (61-75 N.m). Turn capscrew clockwise to tighten.

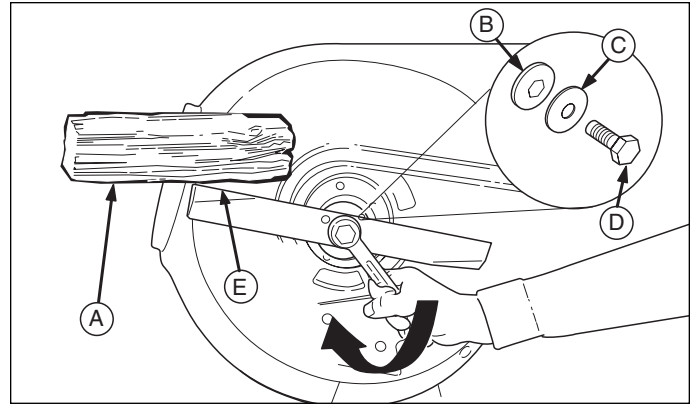


Figure 3. Blade Installation

A. 4x4 Wood Block

B. Hex Washer

C. Spring Washer

D. Blade Capscrew

E. Blade w/Lift Wings

6. Remove and discard short blowout baffle (C, Figure 4), carriage bolts (B) and locknuts (D) from mower deck (A).

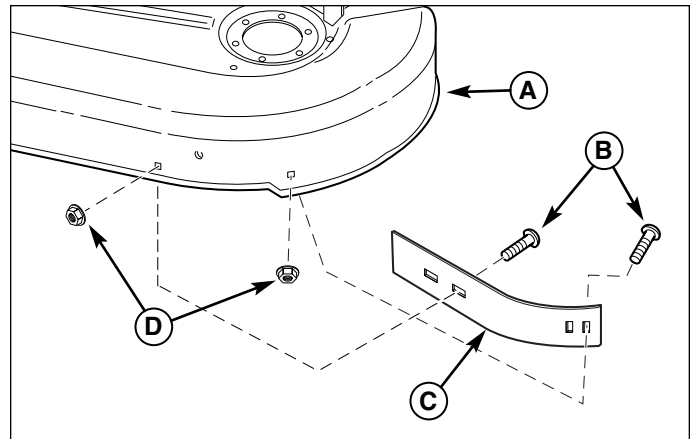


Figure 4. Baffle Removal

A. Mower Deck

B. Carriage Bolts, 5/16-18 x 3/4

C. Blowout Baffle, Short

D. Nut, Whizlock, 5/16-18 x 3/4

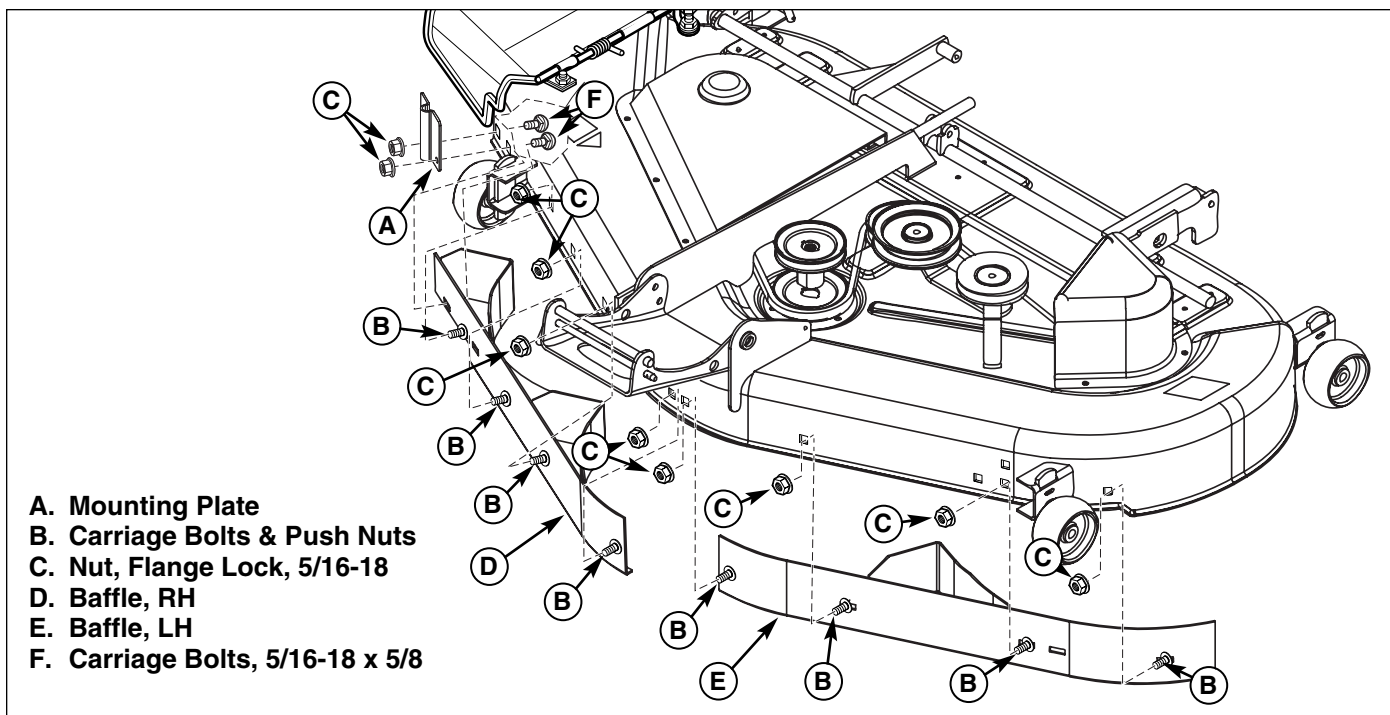


Figure 5. Baffle Installation

7. Install RH baffle (D) and secure with carriage bolts & push nuts (B) and nuts (C).

Note: The carriage bolt & push nuts are combined to hold carriage bolt in place and aid in ease of installation.

8. Install mounting plate (A, Figure 5) to mower deck securing with 5/16-18 x 5/8 carriage bolts (F) nuts.
9. Install LH baffle (E) and secure with carriage bolts & push nuts (B) and nuts (C).
10. Install the mower deck. Refer to the Operator's Manual (see Mower Deck Removal & Installation)
11. Lift discharge deflector up (D, Figure 6).
12. Insert mulch baffle assembly (A) into mounting plate (B).
13. Pull rubber strap (E) and secure by placing strap completely over locknut (C).

Note: The new mulching blades DO NOT need to be removed or changed for side discharge. For use with a bagger the mulching/side discharge blade will need to be replaced with a bagging blade.

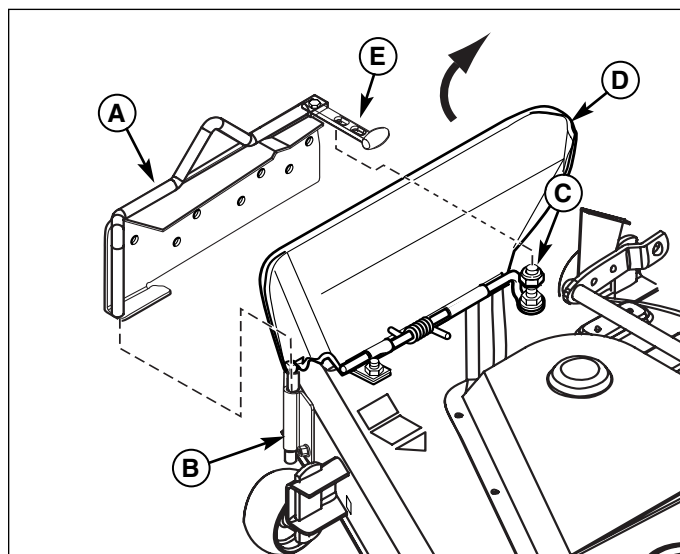


Figure 6. Mulch Cover Installation

- A. Baffle Assembly**
B. Mounting Plate
C. Locknut
D. Discharge Deflector
E. Rubber Strap

NOTES



MANUFACTURING, INC.

500 N Spring Street / PO Box 997
Port Washington, WI 53074-0997 USA

Form No. 1732615-03

Rev. 4/2006

© 2006 Simplicity Manufacturing, Inc. All Rights Reserved
TP 200-4262-03-AT-SMAN